



Official Lane Maintenance and Capital Equipment Provider

DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date: 12-Apr-17
Pattern Type: Sport
Pattern Difficulty: High
Pattern Designer: Brunswick
Pattern Volume (ml): 24,25

Surface Information

Surface Type: Synthetic
Surface Brand: Brunswick Pro Lane
Age: 10

Pattern Parameters

Pattern Number: 1
Pattern Name: 2017 RUSSIA1
Mode: Clean & Oil
Forward Speed: Max Clean
Start Cleaner Spray: 0
Start Squeegee: 0
Start Oiling: 6
Split Pattern: No


Supplies Information

Lane Cleaner: MAX10
Cleaner Mixture Ratio: 10 : 1
Cleaner Transition Distance: 46
Cleaner Spray End Distance: 53
Lane Conditioner: DEFY

Notes

Table with 8 columns for zones. Headers: Zone, Zone End Distance, Zone Ratio (L, R), Zone Volume (ml). Values for zones 1-5 are provided, zones 6-8 are greyed out.

Table with 8 rows (Zones) and 33 columns (Board Numbers). Columns are grouped into 7 Pin Side, Board Number, and 10 Pin Side. Values represent oil units per board number.

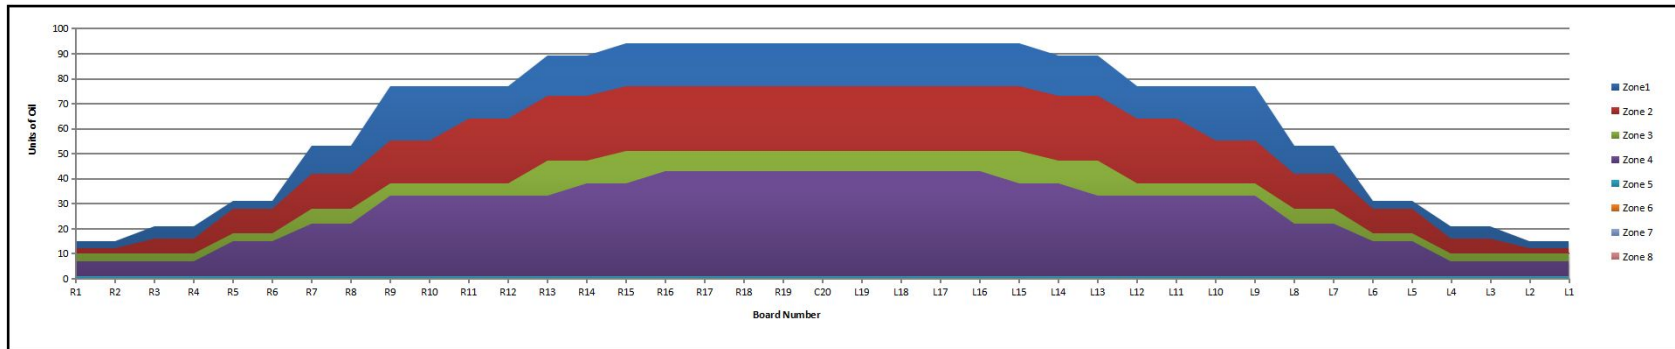



2017 RUSSIA1

Crosswise Ratios (by units)

Zone 1				Zone 5			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 31,4	2,9	3L-7L	Left = 1,0	1,0		
3R-7R	Right= 31,4	2,9	3R-7R	Right= 1,0	1,0		
18L-18R	Center = 94,0		18L-18R	Center= 1,0			
Zone 2				Zone 6			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 26,0	2,9	3L-7L	Left = #DIV/0!	#DIV/0!		
3R-7R	Right= 26,0	2,9	3R-7R	Right= #DIV/0!	#DIV/0!		
18L-18R	Center= 77,0		18L-18R	Center= #DIV/0!			
Zone 3				Zone 7			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 16,8	3,0	3L-7L	Left = #DIV/0!	#DIV/0!		
3R-7R	Right= 16,8	3,0	3R-7R	Right= #DIV/0!	#DIV/0!		
18L-18R	Center= 51,0		18L-18R	Center = #DIV/0!			
Zone 4				Zone 8			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 13,2	3,2	3L-7L	Left = #DIV/0!	#DIV/0!		
3R-7R	Right= 13,2	3,2	3R-7R	Right= #DIV/0!	#DIV/0!		
18L-18R	Center = 43,0		18L-18R	Center= #DIV/0!			

Crosswise Ratios (by ml)

Zone 1				Zone 5			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 0,145	2,9	3L-7L	Left = 0,000	#DIV/0!		
3R-7R	Right= 0,145	2,9	3R-7R	Right= 0,000	#DIV/0!		
18L-18R	Center = 0,433		18L-18R	Center= 0,000			
Zone 2				Zone 6			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 0,098	2,9	3L-7L	Left = 0,000	#DIV/0!		
3R-7R	Right= 0,098	2,9	3R-7R	Right= 0,000	#DIV/0!		
18L-18R	Center= 0,290		18L-18R	Center= 0,000			
Zone 3				Zone 7			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 0,049	3,0	3L-7L	Left = 0,000	#DIV/0!		
3R-7R	Right= 0,049	3,0	3R-7R	Right= 0,000	#DIV/0!		
18L-18R	Center= 0,150		18L-18R	Center = 0,000			
Zone 4				Zone 8			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 0,017	3,2	3L-7L	Left = 0,000	#DIV/0!		
3R-7R	Right= 0,017	3,2	3R-7R	Right= 0,000	#DIV/0!		
18L-18R	Center = 0,054		18L-18R	Center= 0,000			

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

