



Official Lane Maintenance and Capital Equipment Provider

DIRECT+ Conditioning System



ENVOY



AUTHORITY22

Select Machine

Pattern Information

Date: 12-Apr-17
Pattern Type: Sport
Pattern Difficulty: High
Pattern Designer: Brunswick
Pattern Volume (ml): 25.54

Surface Information

Surface Type: Synthetic
Surface Brand: Brunswick Pro Lane
Age: 10

Pattern Parameters

Pattern Number: 2
Pattern Name: 2017 RUSSIA1
Mode: Clean & Oil
Forward Speed: Max Clean
Start Cleaner Spray: 0
Start Squeegee: 0
Start Oiling: 6
Split Pattern: No


Supplies Information

Lane Cleaner: MAX10
Cleaner Mixture Ratio: 10 : 1
Cleaner Transition Distance: 46
Cleaner Spray End Distance: 53
Lane Conditioner: DEFY

Notes

Table with 8 columns (Zone 1-8) and 3 rows (Zone End Distance, Zone Ratio, Zone Volume (ml)).

Table with columns for ZONE, 7 Pin Side, Board Number, and 10 Pin Side. Rows 1-8.

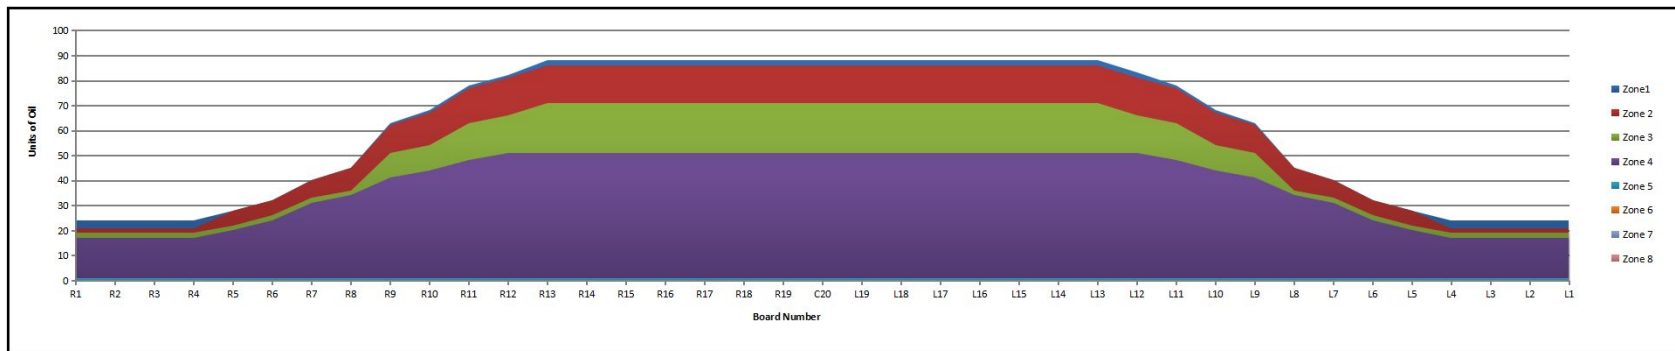



## 2017 RUSSIA1

### Crosswise Ratios (by units)

Zone 1				Zone 5			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 29,6	2,9	3L-7L	Left = 1,0	1,0		
3R-7R	Right= 29,6	2,9	3R-7R	Right= 1,0	1,0		
18L-18R	Center = 88,0		18L-18R	Center= 1,0			
Zone 2				Zone 6			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 28,4	3,0	3L-7L	Left = 0,0	#DIV/0!		
3R-7R	Right= 28,4	3,0	3R-7R	Right= 0,0	#DIV/0!		
18L-18R	Center= 86,0		18L-18R	Center= 0,0			
Zone 3				Zone 7			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 23,8	2,9	3L-7L	Left = #DIV/0!	#DIV/0!		
3R-7R	Right= 23,8	2,9	3R-7R	Right= #DIV/0!	#DIV/0!		
18L-18R	Center= 71,0		18L-18R	Center = #DIV/0!			
Zone 4				Zone 8			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 21,8	2,3	3L-7L	Left = #DIV/0!	#DIV/0!		
3R-7R	Right= 21,8	2,3	3R-7R	Right= #DIV/0!	#DIV/0!		
18L-18R	Center = 51,0		18L-18R	Center= #DIV/0!			

### Crosswise Ratios (by ml)

Zone 1				Zone 5			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 0,161	2,9	3L-7L	Left = 0,000	#DIV/0!		
3R-7R	Right= 0,161	2,9	3R-7R	Right= 0,000	#DIV/0!		
18L-18R	Center = 0,480		18L-18R	Center= 0,000			
Zone 2				Zone 6			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 0,048	3,0	3L-7L	Left = 0,000	#DIV/0!		
3R-7R	Right= 0,048	3,0	3R-7R	Right= 0,000	#DIV/0!		
18L-18R	Center= 0,144		18L-18R	Center= 0,000			
Zone 3				Zone 7			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 0,030	2,9	3L-7L	Left = 0,000	#DIV/0!		
3R-7R	Right= 0,030	2,9	3R-7R	Right= 0,000	#DIV/0!		
18L-18R	Center= 0,089		18L-18R	Center = 0,000			
Zone 4				Zone 8			
	Average	Ratio		Average	Ratio		
3L-7L	Left = 0,091	2,3	3L-7L	Left = 0,000	#DIV/0!		
3R-7R	Right= 0,091	2,3	3R-7R	Right= 0,000	#DIV/0!		
18L-18R	Center = 0,214		18L-18R	Center= 0,000			

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

